

SPRAYABLE SEAM SEALER GUN #1575



Professional gun for applying Sprayable Seam Sealer. The gun is designed to accept both plastic and aluminum cartridges. The gun is hermetically sealed which avoids hardening of the product when not in use.

The adjustments to air and product flow make it possible to duplicate OEM seams, as well as many other beads and patterns. By changing the spray cap, special extrusion nozzles can be attached for easy application of doorskin seams and other beads.

Nickel plated brass body

Spray cap and extrusion cap included

Stainless steel needle

Product flow adjustment

Air atomization adjustment


Air Supply Requirements

(Air pressure regulator & filter are required)

Working pressure: 40-80 psi
Maximum pressure: 140 psi
Air consumption: 7-11 cfm
Minimum hose ID: 1/4"

Directions:

- Open the back end of the gun by unscrewing (counter clockwise) the tube base.
- Hold the Back Revolving Fitting & Tube in place while unscrewing.
- Open the front sealed end of the cartridge and insert it into the gun.
- The front of the Tube Base is not threaded so the gun will work with aluminum and plastic cartridges.
- Screw (clockwise) the Back Tube Base back onto the gun and tighten.
- **Adjust air supply to a working pressure of 40-80 psi.**
- Connect the gun to the air supply.
- Point the spray gun towards the object and pull the lever.
- Turn the knob #9 located on the side of the gun to adjust the air atomization.
- Turning it clockwise gradually closes the air passage and turning it counter clockwise opens it.
- Turn the knob #10 (directly behind handle) clockwise to obtain a gradual decrease of product flow and turning it counter clockwise to increase the product flow.
- The combined adjustments of air adjustment, product flow, distance and angle of application Allows you to attain many different textures and patterns.
- When finished, turn knob #9 (air adjustment) clockwise until it is completely closed.
- While using the extrusion cap & seam sealer tips, the air adjustment knob #9 must be closed.
- **Please read warning and safety instructions inside of box.**

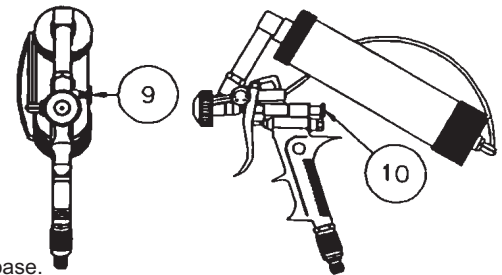

PLEASE NOTE: During intermissions of use always keep a cartridge with sealant inside the spray gun to keep the product from setting up in the gun. At the end of the job or during extended pauses of use, clean immediately. See instructions for maintenance enclosed with the gun. Product hardening inside the pipes of the spray gun will clog and consequently damage it. Do not leave the cartridge inside the spray gun any more than 1-2 days with polyurethane or modified polymer type sealants and no more than 8 to 10 days with rubber base or solvent base sealants.

Since we have no control over the use or maintenance of this gun, we will not be responsible for clogged guns. We recommend lubricating the end cap with a lubricant to prevent thread damage.

ALSO AVAILABLE:

1576 Replacement Nozzles (Round - Bead)	12/pkg
1577 Replacement Nozzles (Notched - Door Skin)	12/pkg
1578 Replacement Nozzles (Grey - Precision)	3/pkg

Product # 1575
1 Sprayable Seam
Sealer Gun