

Directions for using IES Dual-Mix Cartridge products

www.useies.com

Press release lever and pull plunger rods all the way back. (Fig. A)



Figure A

When using a 2:1 ratio product, refer to the conversion instructions for #96212 Manual Gun or the #96215 Pneumatic Gun. Instructions are enclosed with each gun and can also be found online at www.useies.com

Place back end of the twin cartridge onto the plungers first. (Fig. B)



Figure B

Bring down the front of the cartridge and seat into the gun. (Fig. C)



Figure C

To remove cap, insert flat head of screw-driver into slot and pry upward. (Fig. D)



Figure D

Remove cap completely from cartridge. (Fig. E)
Cap can be re-inserted to seal a partially used cartridge. To avoid cross contamination, match up the circles and squares on the cap and top of the cartridge body.



Figure E

Tilting the gun back, pump the gun until the product flows equally from both chambers. This procedure equalizes the chambers to insure an equal mix. This is a very important step. (Fig. F)



Figure F

Install the static mixer nozzle on the end of the nosepiece and tighten in a clockwise direction until securely fastened. (Fig. G)



Figure G

Pump material through the mixer nozzle. Discard the first 3 inches of product, then proceed with application. (Fig. H) To retain unused product, remove the mixer nozzle and install the cap into the appropriate sides of the cartridge after use.

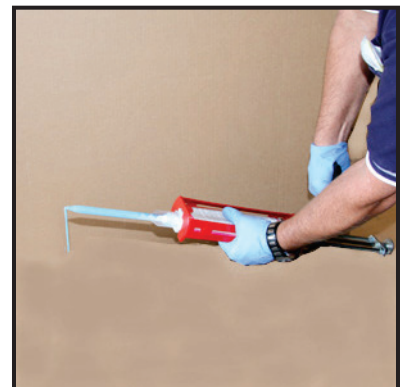


Figure H